


## HOW TO DISMANTLE AND REINSTALL A CLUTCH BELL

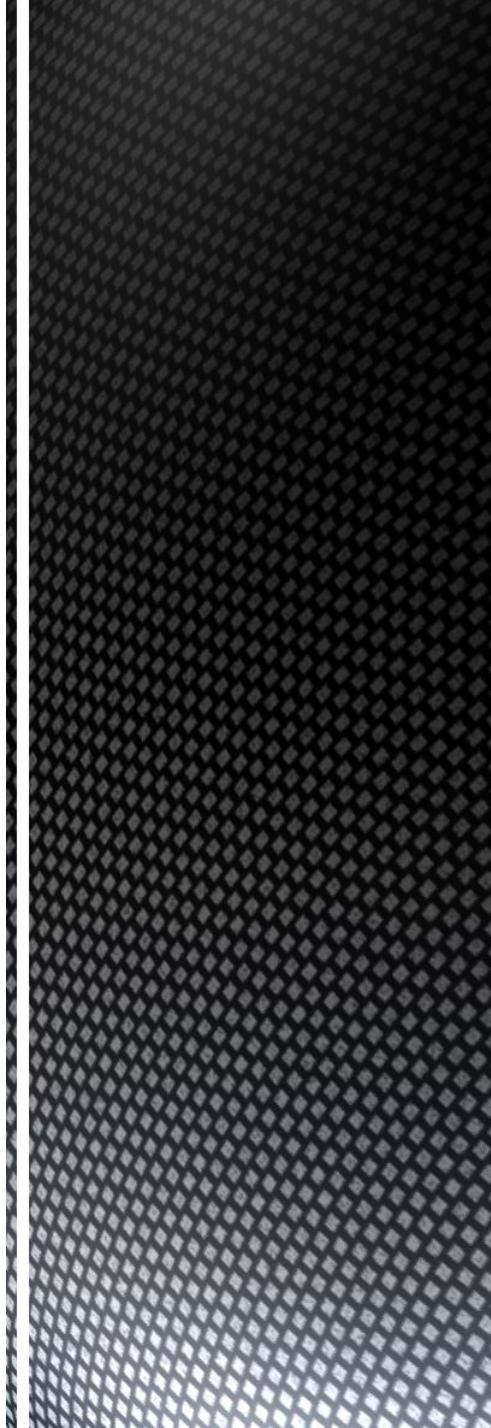

Remove the small seeger with the proper pliers



Remove the washer



Take a puller as the one in the picture, insert it in the holes of the bell and screw until the bell comes out completely.



Once the old bell is dismantled, make sure that the washer of 1 mm on the nut that holds the clutch is still in place.



Heat the bell with a blow-dryer on both sides, about 30 seconds per side, using proper heat-resistant gloves



Insert it quickly on the drive shaft, pushing it until the bottom. Put the washer of 0,5 mm and reinstall the seeger.

